


## Trigger Guard Laser for the Smith & Wesson® Shield


UTA-SH

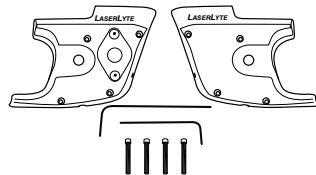

\* *Read instructions completely before installing your laser. Failure to do so may result in damage to your laser or firearm.*  
Installation:


- UNLOAD FIREARM.
  - Attach danger label to side of gun near laser with arrow pointing toward front sight.
  - DO NOT TOUCH THESE PINS (Figure A).
- 1 Place each side of UTA-SH laser on front of trigger guard (battery cover on right).
  - 2 Insert four attachment screws from left side as shown. Tighten down until snug with the .050 hex key provided. With same hex key, tighten down battery cover. Do not over tighten battery cover, and check periodically.

- UNLOAD FIREARM.
- Attach danger label to side of gun near laser with arrow pointing toward front sight.
- DO NOT TOUCH THESE PINS.

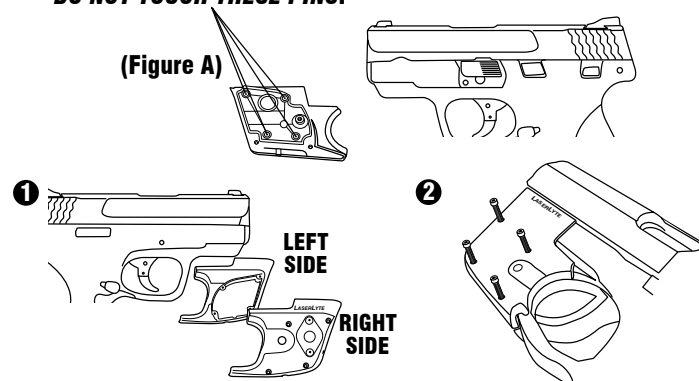

**Activation:** UTA-SH laser has ambidextrous activation.

- 1 Press once turns laser on: constant or pulse.
- 2 Press and hold for 5 seconds to change mode.
- 3 Second press turns laser off.

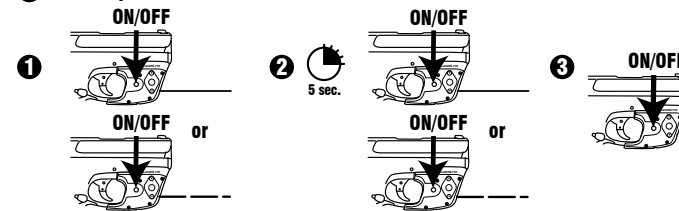

**Laser Sight In:**

- 1 Use the provided .035 hex key to adjust the sight.
- 2 Always end adjustments on a clockwise turn.
- 3 Make final adjustments at shooting range.

